

Instructions to Record in Web Mode

1. Turn on DVR by pressing the power button until screen turns on.
2. Navigate to “Movie Recorder” using the toggle on the right side of the DVR.
3. Select “Movie Recorder” by pressing the toggle directly center.
4. Press the menu button (located directly beneath the toggle).
5. Select “Video Size” by pressing the toggle directly center.
6. Navigate to “Web” using the toggle.
7. Select “Web” by pressing the toggle directly center.
8. Press the menu button (located directly beneath the toggle).
9. Press the record button located on top edge of DVR to begin recording in web mode.

To change DVR back to DVD mode follow steps 2 through 8, replacing “Web” with “DVD” in steps 6 and 7.

